## **Integral Actuator**

## **HT-180 Series**

#### **Features and Benefits**

- Replaces existing mechanical governor
- Proven electromechanical design
- Spring balanced system that allows the fuel rack to return to minimum fuel



# For Deutz 1012/1013/2012 and Volvo 520/720 Engines

The HT-180 SERIES Integral Actuator is designed to mount directly to Deutz 1013/2012 and Volvo 520/720 engines. The existing mechanical governor is removed from the engine and the HT-180 SERIES integral actuator is mounted in its place. The actuator exhibits high quality construction and is designed for high temperature operation. Huegli Tech's unique electromechanical technology provides proportional actuator movement, based on actuator coil current.

This unique, optimized fuel control will outperform externally mounted electric actuators. An integral high performance speed control system results when the HT-180 SE-RIES electric actuator is installed on the engine and electrically connected to compatible HT governor system components. No external linkage or brackets are required.

The 180 SERIES actuator is an electromagnetic device, which moves the fuel system control rack. It can be integrated into a closed loop speed control system.



#### Description

A basic engine speed control system is described as follows: The magnetic speed sensor generates an electrical signal that is proportional to engine speed. This signal is sent to the electronic speed control unit, which compares it to a preset engine speed setting. If the engine speed and the preset engine speed are not equal, the speed control unit adjusts the actuator current, which adjusts the actuator's magnetic force. The actuator's internal output lever position is proportional to the magnetic force generated and is counterbalanced by an internal return spring.

#### Installation

Installing the HT-180 SERIES actuator involves removing the engine's mechanical governor control. Therefore, engine shutdown is achieved by switching off the power supply to the speed control unit. The actuator return spring counteracts the engine's internal fuel rack spring by forcing the rack to zero fuel.

Since the design incorporates precision parts of superior quality and is sealed from the environment, outstanding rel ability results. No maintenance is required.

#### **Preparing the Engine**

Verify that the actuator voltage rating matches the battery voltage (See part number label).

WARNING: Remove the battery negative connection before proceeding.

Before removing the engine's mechanical governor and replacing it with the 180 Series electric actuator, it is important that the surrounding area be clean. Remove any dirt using compressed air or a suitable cleaning solvent. Prevent any contamination from entering the engine. If a solvent is used, place a suitable container underneath the mechanical governor to collect the waste solvent and dirt. Dispose of the waste solvent by an environmentally accepted method. Unbolt the engine's mechanical governor. Engine lubrication fluid will be present inside the mechanical governor.

#### **Installing The Actuator**

Required material:

- Installation Instructions for HT-180-Series actuator
- Loctite 638 (frost plug), 242 (screws)
- Liquid silicone gasket
- KT-180-HT Installation kit, containing:
  - 1 Frost Plug No. 0118-1410
  - 4 Screws M8x55

1. Install the frost plug to seal off the area that allowed flow of lubrication fluid to the mechanical governor.

The HT-180 SERIES electric actuator does not require lubrication from the engine. Installing this frost plug will insure that sufficient lube oil pressure will be maintained in the engine.

- 2. Adjust the max fuel stop in the actuator. For frost plug mounting and max fuel adjustment please refer to the installation instructions.
- 3. Use a small amount of silicone gasket maker to seal the mounting surface of the HT-180 SERIES electric actuator. A bead of the silicone gasket maker material should be placed in both circular grooves that are located on the actuator's mounting surface on the engine.

#### Wiring

The HT-180 SERIES has a dedicated 12 or 24-volt coil. The actuator models are identified in Chart.

1. Insure that the actuator voltage matches the battery supply voltage.

An actuator cable harness is used to connect the HT-180 SERIES actuator to the selected Huegli Tech speed control unit. Polarity needs to be observed.

The cable harness with mating half connector provides a vibration resistant and environmentally sealed electrical connection. See the specific speed control unit literature for additional wiring information.

#### **Troubleshooting**

If the electric governor system fails to operate, and the actuator is suspected to be the problem, make the following tests.

Measure Coil Resistance (Room Temp.)

- 1.9 ohms 12 VDC
- 7.4 ohms 24 VDC

Measure Coil Isolation (Each wire to actuator housing)

>1M ohm

Remove the main cover. Manually move the actuator lever through its range of motion. No binding or sticking should occur. Energize the actuator to full fuel (follow the steps in the speed control unit publication). The actuator should operate smoothly throughout its entire stroke without any binding or interruptions in motion.

If the actuator passes these tests, the problem is likely elsewhere in the governor or fuel system. Refer to the speed control unit publication for additional troubleshooting information.


Actuator Model	12 Volt	24 Volt	w/ Mating Connector
HT-180-12/24	*	*	no, see next page




# **Integral Actuator**

HT-180 Series

#### **Dimensions**

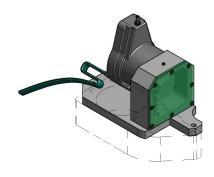

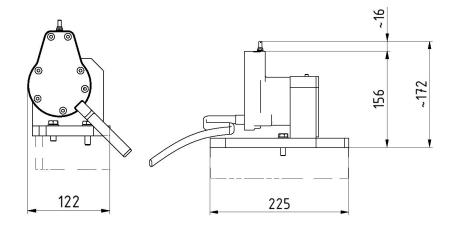

#### **Specification**

Operating Voltage	12 or 24V DC available
Typical Operating Current	3 Amps @ 12V DC
	1.6 Amps @ 24V DC
Maximum Current (cont.)	6 Amps @ 12V DC
	3.5 Amps @ 24V DC
Operating Temperature	
Range	40°to 100°C
Relative Humidity	up to 100%
All Surface Finishes	Fungus proof
	& Corrosion resistant

Dimensions	See illustration
Weight	3.8 kg
Mounting directly on engine	Deutz 1013/2012
	& Volvo 520/720
Testing All Units	100% Tested

#### Mating Harness, select for 12 or 24VDC operation

- CH-TM12-L04: For 12 VDC operation length 4 meter
- CH-TM12F-L04: For 12 VDC operation with Position Feedback length 4 meter
- CH-TM24-L04: For 24 VDC operation length 4 meter
- CH-TM24F-L04: For 24 VDC operation with Position Feedback length 4 meter

#### **Local Distributor / Partner:**



HUEGLI TECH AG (LTD) Murgenthalstrasse 30 4900 Langenthal Switzerland Phone: +41 62 916 50 30 Fax: +41 62 916 50 35 e-mail: sales@huegli-tech.com www.huegli-tech.com